





Quick Start Guide



Item Number: IV-DVFH6100IR-700G

Thank you for purchasing our products.
Please read this Quick Start Guide carefully before operating.

Safety Precaution

	Warning Don't dismantle without authority, becareful thunder striking.	
<p>Note: To avoid thunder-striking, please don't open the backcover, the maintenance must be made by our authorized serviceman.</p>		

Warning


- To prevent fire or shock hazard, please do not expose the unit into the water for a long period of time.
- Please make sure the adapter is consistent with product specifications, otherwise it might cause fire, electric shock or damage.
- Pay attention to polarity of the adapter, it might cause some accidents like fires.
- Please don't connect multiple cameras with the same adapter at the same time; overloading of adapter capacity may cause fires.
- Power supply must be firmly fixed to prevent fire.
- If the device gets abnormal smell or smoke, please stop it immediately and contact with our customer service center.
- If the camera doesn't work as usual, please do not dismantle / disassemble it by yourself. Please contact our local distributor or our maintenance office authorized by our company, otherwise the warranty is voided.
- Please do not splash water on the product components when cleaning.

Technical Specifications

<u>Item Number:</u>	<u>IV-DVFH6100IR-700G</u>
<u>Signal System:</u>	<u>NTSC</u>
<u>Sensor CCD:</u>	<u>Sony Effio-E</u>
<u>Horizontal resolution:</u>	<u>700TV lines</u>
<u>Lens:</u>	<u>2.8-12mm</u>
<u>Minimum Illumination:</u>	<u>0 LUX (IR ON)</u>
<u>S/N Ratio:</u>	<u>More than 48 Db</u>
<u>Distance:</u>	<u>100 feet</u>
<u>LED:</u>	<u>36PCS LED</u>
<u>Video Output:</u>	<u>1Vp-p 75Ω . Y/C Separated</u>
<u>Connector video :</u>	<u>BNC</u>
<u>Operation Temperature:</u>	<u>-4°F to +122°F</u>
<u>Supplied Power:</u>	<u>12VDC(+/-10%)</u>

Installation

1. Connect the BNC end of the Camera Cable to an extension cable, or directly to a DVR / Observation System or to a TV/Monitor.
2. Attach the base to the wall/ceiling, then mount camera to base.
3. Rotate lens to desired position and tighten the set screw to prevent rotation.

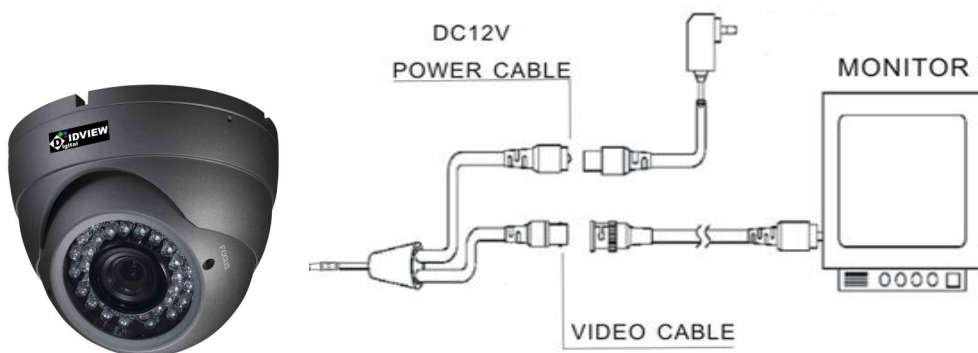

Troubleshooting

1. No picture or unstable - Check the connections.
2. The image is so blurred
 - a. Checking is there something dirt on the lens, then use customized lens paper or cotton buds with alcohol drenched to clean.
 - b. Check the focus length and OSD settings
3. The image is so dim - Adjust the CNT of monitor and iris
4. No motion detection frame and privacy shaded frame -Check the option is ON or OFF. Or check the menu parameters
5. Screen color cast in the special environment - Adjust WEB mode or direction
6. The screen flickering – Adjust camera angle to change light input.
7. Functions are not working correctly - Restore default settings
8. The camera works abnormally; the surface over-heats; has peculiar smell, smoke etc. – Please immediately disconnect power. Then send the camera to professionals for maintenance

Accessory List

No.	Name	Quantity	Remark
1	CCTV Camera	1	
2	User Manual	1	
3	Screw	1	